



ABR - SIDEWINDER


RAM120 AIR COMPRESSOR

Item: RAM120 12V DC

Version: 1.0

Date: November 2011

INSTRUCTIONS

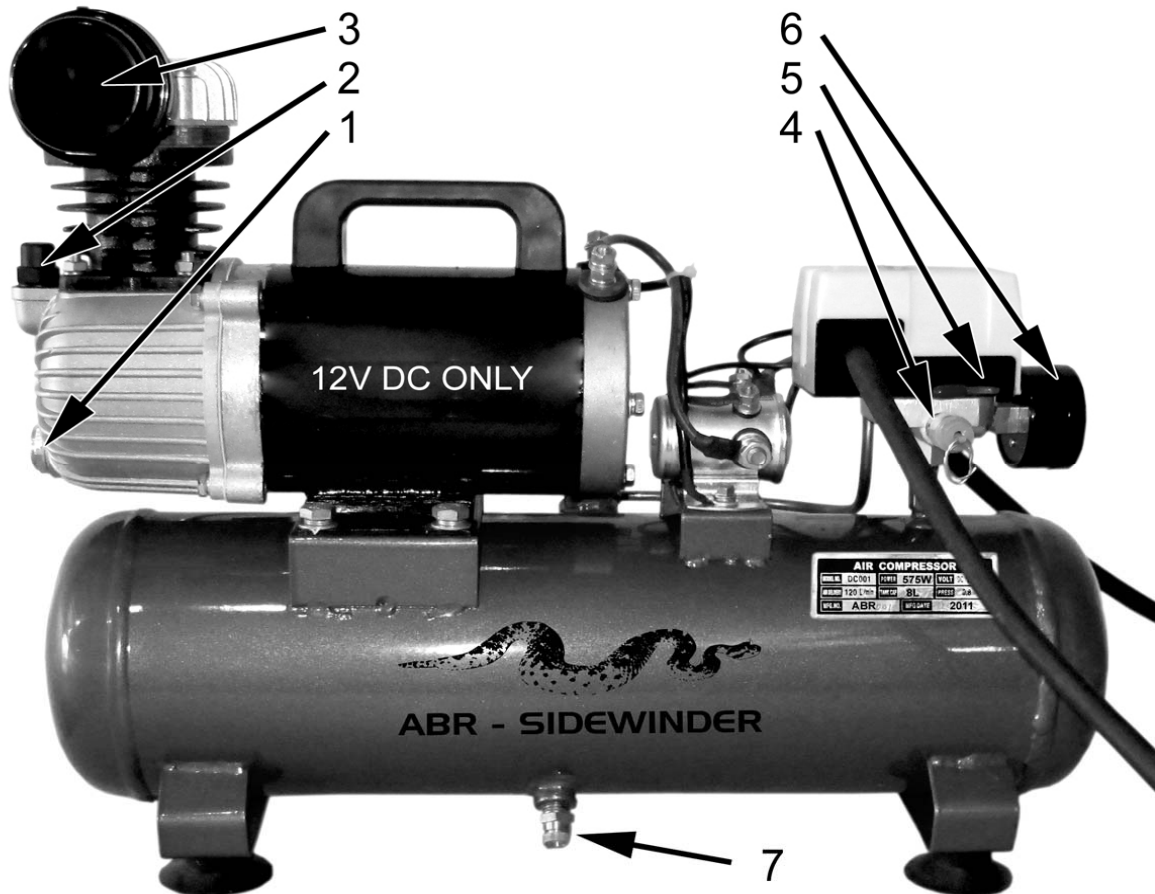

I ASSEMBLY

DO NOT ATTEMPT TO USE THE COMPRESSOR UNTIL YOU HAVE DONE THE FOLLOWING. (See numbered picture above for position of parts)

- 1) Remove the blanking plug #2 and top up the oil with clean engine oil to the top of the sight glass #1. Fit the supplied crank case breather to position #2.
- 2) Fit the air filter assembly #3.
- 3) Make sure on/off switch is in OFF position #5.
- 4) Make sure water drain is closed #7.

I OPERATION

Notes: This is a 12V DC compressor and can only be used on a 12V car or truck battery, do not attempt to use the compressor on any other voltage.

Safety: Compressed air is dangerous, keep children away and take care with tools and accessories. Do not direct air towards any person. Safety glasses should be worn.

- 1) Check that the compressor is switched off at #5.
- 2) Check that the water drain is closed at #7.
- 3) Check that the compressor has oil and the air filter is fitted.
- 4) Close the air valve or disconnect any air tools.
- 5) Connect the power cables to the 12V battery. RED (+) and BLACK (-).
- 6) Switch the compressor on at #5.
- 7) Allow the compressor to fill the tank and it will switch off, you can now use the compressor and it will switch on and off automatically to keep the tank full.
- 8) When done using the compressor switch off the compressor at #5 and then only disconnect the power cables.

MAINTENANCE

After the first 5 hours use change the oil – replace with clean engine oil at #1 and #2. Check that all bolts and fittings are tight.

Once a week drain the water from the tank at #7.

Every 50 hours change the oil – replace with clean engine oil at #1 and #2

Blow out the air filter every 2 to 3 months depending on use #3.

Warranty: This product is covered by a 12 month warranty. Excludes reverse connection, impact damage, water ingress, damage from misuse or modification, damage from old or contaminated oil. Return the product with a copy of the original invoice and detailed description of the problem to original place of purchase.



ABR - SIDEWINDER
P.O.Box 4065, Gumdale, QLD, 4154
www.sidewinder.com.au



(07) 3890 5899

Email: info@sidewinder.com.au